


**AUSTRIAN AUDIO**

## **OCR8 Bluetooth® Dongle Manual**

### **Introduction and Safety Instructions**

Please read, understand, and follow all instructions in this manual before using this product.

This product was made for professional users and we ask you to follow a few restrictions to guarantee a hassle-free workflow for you, and to keep the product in perfect working condition:

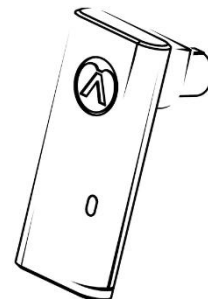

- Please do not operate this product in other than the intended use cases.
- Do not use if the product is defective
- Always keep and operate the product in a dry and safe place
- Do not expose it to excessive heat (for example, do not leave it in your car parked in the sun)
- If you need to bring the product inside from the cold, please give it time to reach adequate temperature before use (allowed storage temperature range: -25°C to 60°C).
- Do not operate outside the intended operating temperature range: 0°C to 55°C
- Do not use this product in a wet or in humid environment
- Do not drop
- Only connect the OCR8 to the OC818. Do not connect it to any other devices
- Please keep this product away from small children and persons who are not able to operate professional audio equipment
- If you need to clean the product, do this only with a soft dry cloth
- Please do not use any third-party accessories unless otherwise stated
- Do not disassemble the product, as there are no user-serviceable parts
- Do not remove the sticker

Thank you for reading the instructions so far and thank you for putting your trust in Austrian Audio.

### **How to operate the OCR8:**

The OCR8 connects your OC818 microphone to your mobile device (Smartphone or Tablet) via Bluetooth.


### **Download the App**

Download the Austrian Audio App (containing PolarPilot) from the Apple™ App Store™ or the Google Play™ Store. Please make sure that your device is running on the latest version of its operating system. The minimum requirement at the time of the initial release, is iOS™ 11 or Android™ 5. Also, the device must support BLE (Bluetooth Low Energy also called Bluetooth LE or Bluetooth Smart). Current mobile devices are commonly released with hardware and software for Bluetooth Low Energy, and almost all devices running these operating systems will be compatible.

As the App is using Bluetooth, please ensure that Bluetooth is switched on. Some devices may ask you to allow the Austrian Audio App access to your location information. This information is used by the Bluetooth protocol only – we are not processing or tracking any kind of personal data.

## Preparing the OC818


Switch the pattern selector to "•" (= Preset Mode - all the way to the right)



## Power the OCR8

The OCR8 is powered by the phantom power from the OC818, so please make sure that you are supplying the OC818 according to P48 (48V +/- 4V). Peak current consumption is below 4 mA (OC818 with OCR8 connected). Almost all state-of-the-art professional mixing consoles, preamps and audio interfaces provide enough power, however some battery driven, or older devices may fail to do so!

You may either connect the OC818 to phantom power first, or plug the OCR8 into the OC818 first. Once you have completed both steps, the OCR8 will automatically switch into "pairing mode" and the blue LED will flash fast. Now it is time to open the Austrian Audio App.

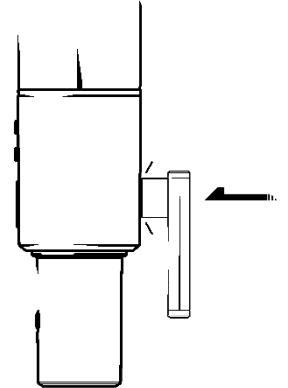

## Establishing the Bluetooth connection

After you open the app, click on "search for new devices" to connect to the OCR8. Enter the serial number (please include the "0" digits) that can be found on the sticker of the OCR8. This is the password to identify that you have the right to connect to this device.

You can now start to work with the App's PolarPilot, which will give you full wireless control over the OC818.

## Tips for working with PolarPilot

We suggest you name your microphones first, especially if you own more than one (lucky you)!

### ***Polar pattern:***

You can change the polar pattern with the slider below the graphic. For small changes, you can also use the "-" or "+" buttons. Please note that the microphone needs a few seconds to adapt to the new pattern, especially if you switch all the way from figure-8 (left) to omni (right) or vice versa. Please also note that if you are using the slider, the polar pattern will only start to adjust once you have released the slider!

### ***High Pass Filter:***

The high pass filter is a powerful tool to reduce unwanted low frequencies, like stage noise, handling.

"0" means not active

"40" is a high pass 2<sup>nd</sup> order filter at 40 Hz

"80" is a high pass 2<sup>nd</sup> order filter at 80 Hz

"160" is a high pass 1<sup>st</sup> order filter from 160 Hz to 80 Hz, and a high pass 2<sup>nd</sup> order filter below 80 Hz.

### ***Pad Switch:***

The Pad switch reduces the sensitivity of the microphone and prevents overloading the microphone in loud environments.

"0" means not active

"-10" means that the microphone is 10 dB less sensitive

"-20" means that the microphone is 20 dB less sensitive

**Override/Overload monitor:**

At the bottom of the screen you will see the overload monitor. It will show an red bar if the signal is too loud to be properly picked up by the microphone. In this case, you should use the “-10” Pad Switch to resolve this issue. This will reduce bias voltage to the capsule and protect the mic’s internal circuitry from clipping.

**Save function:**

You can save your favorite settings to easily retrieve them or program them into another OC818. Please note that this setting is stored locally on your smart device.


**Preset Mode:**

If you unplug the OCR8, the OC818 will keep the latest pattern settings and store them in the “•” (= Preset Mode) position. By setting the microphone to this position, you can always retrieve the stored setting at any time, including Pad and High Pass settings.

Note that the hardware controls for Pad and High Pass on the microphone are overridden in Preset-Mode and only become active again once you switch to another polar pattern position.

**Using the PolarPilot as a Monitor:**

If you do not switch the OC818 into the “•” (= Preset Mode) position and connect the OCR8, you can still use PolarPilot as a monitor to see the pattern, pad and filter settings, as well as watching the override monitor. Please note that you cannot make any adjustments unless you switch to “•” (= Preset Mode) on the microphone.

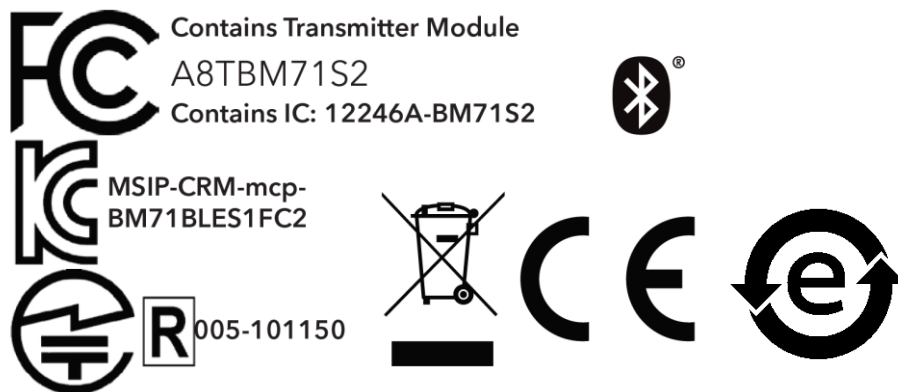

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Made in Taiwan

The CE declaration of this product can be found at <http://austrian.audio/OCR8>  
OCR8 Manual v7. Copyright Austrian Audio 2026.

All rights reserved by  
**Austrian Audio GmbH**  
Eitnergasse 15  
1230 Wien

---

Apple and App store are trademarks of Apple Inc., registered in the U.S. and other countries. iOS is a trademark of Cisco in the U.S. and other countries. Android and Google Play are trademarks of Google LLC. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc.